
## Installation manual of the 18 m single top star tent



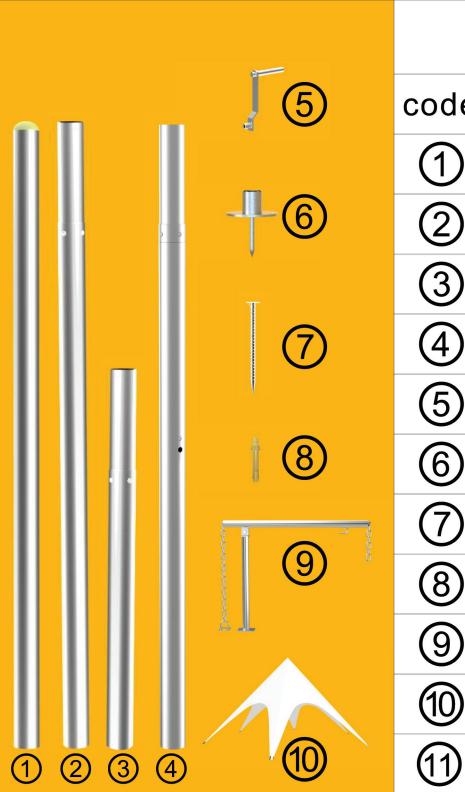

| Packing list |             |          |                    |
|--------------|-------------|----------|--------------------|
| code         | item        | quantity | size(mm)           |
| 1            | up pole     | 1pcs     | φ76x2x1760         |
| 2            | second pole | 1pcs     | φ76x2x1760         |
| 3            | third pole  | 1pcs     | φ76x2x1000         |
| 4            | down pole   | 1pcs     | <i>φ</i> 76x2x1760 |
|              |             |          |                    |

crank

foot plate

grass anchor

expansion screw

nail puller

roof cover

sidewall

1pcs

1pcs

6pcs

8pcs

1pcs

1set


0

Ф230x4


M26x620


M10x100

Ø32x2x900

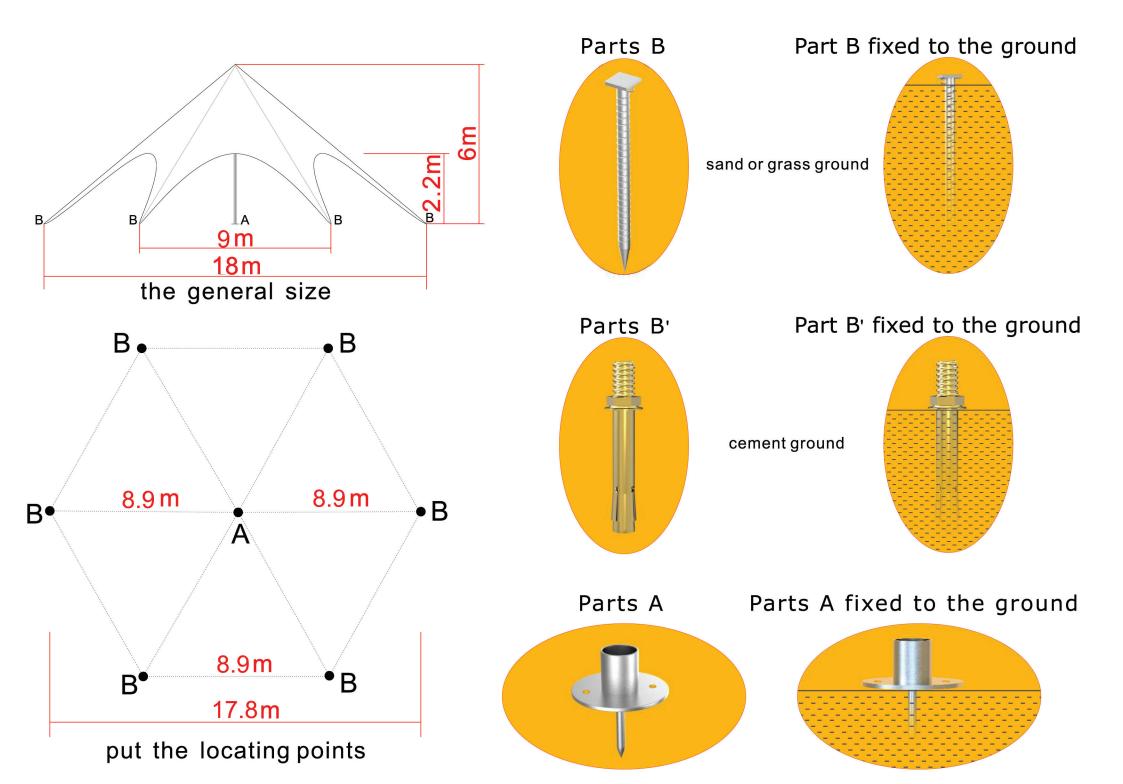



## Installation

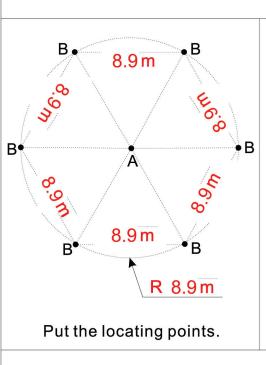


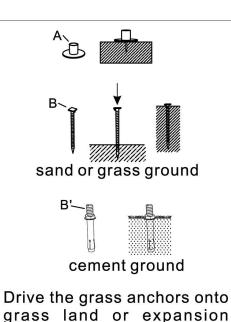


screws onto cement land.

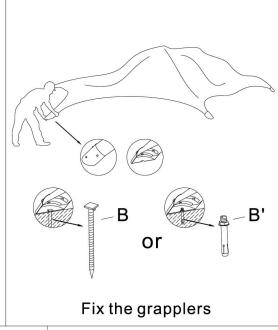


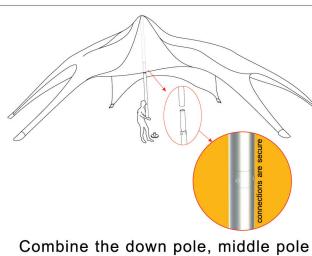


 

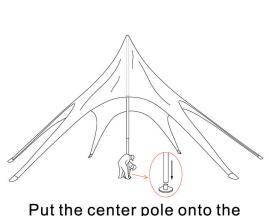


footplate exactly.

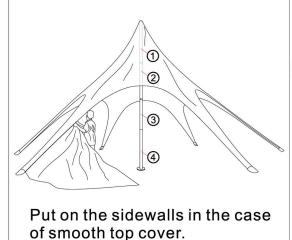

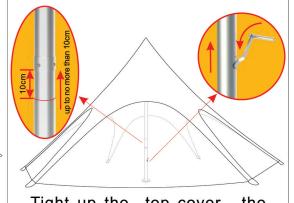

Tight up the top cover, the pole raise is limited 10cm. to avoid the top cover breaken.

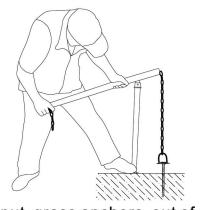

To put grass anchors out of ground.

Caution: Avoid using during heavy downpours and strong wind(80km/h). Follow the instructions to avoid poles,top cover and sidewall breaken.