 


210 mm

4PCS LARGE GAZEBO LIGHT

MODEL NO.: 07268
INPUT: 230 ~ 240V /50HZ
LAMP: 25 W (MAX.) X 4PCS
WATERPROOF & DUSTPROOF CLASS: IP33
POWER CABLE: 2 X 1.5MM² LENGTH 7.5M



IMPORTANT

Please read the following carefully to ensure the satisfactory and safe operation of this light.
IMPORTANT: PLEASE ENSURE THAT THE PLUG IS PLUGGED INTO THE MAINS SUPPLY INDOORS AND NOT OUTDOORS OR IN DAMP CONDITIONS.

HOW TO INSTALLATION:

1. Screw the lamp into the lamp holder.
2. Thread the hole of the hook base by the rope, metal wire or hook.
3. Fix the rope, metal wire or hook.
4. Put the Gazebo lights at the proper positions.

LIGHT

Ensure all lamps are firmly screwed in each holder. If one lamp fails or is not screwed down securely, the remaining lamps will stay alight, failed lamp should be replaced by same rated voltage and wattage. To operate, plug into 230~240V mains socket, indoors - see ' lamp' section for details.


FAILURE OF THIS ITEM TO LIGHT

To locate the defect, please follow these steps:

1. Check the fuse in the main plug.
2. Make sure each lamp is screwed firmly into the lamp holder.
3. If the lamp still doesn't work, replace with a new lamp.

HOW TO REMOVE THE LIGHT AND REPLACE THE LAMP.

1. Disconnect from the main supply before remove the light or replace the lamp.
2. Remove the shade before replace the lamp.
3. Make sure the lamp is cool, then unscrew the lamp.
4. Insert a new lamp, screw down clockwise until it makes contact. (see Fig.)

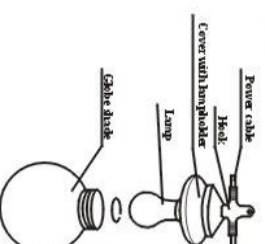

LAMPS

Standard 25W, 230~240V.
Replacements are available from most lighting stockists and retailers

PLUG

This set is fitted with a plug protected by a 3A Fuse. Replace only with another 3A Fuse.

FOR SAFETY'S SAKE

1. Do not damage the insulation of the cable and the lamp holders.
2. Do not connect this light set electrically to any other light set.
3. Do not allow any plastic part to come into contact with heat or flame
4. Retain this box for storage and future reference