


Replace Heating Tube

Remove Faulty Heating Tube


Unscrew the Strip on the Grille





Remove the Grille (remove the 2 screws in the middle of the Grille)

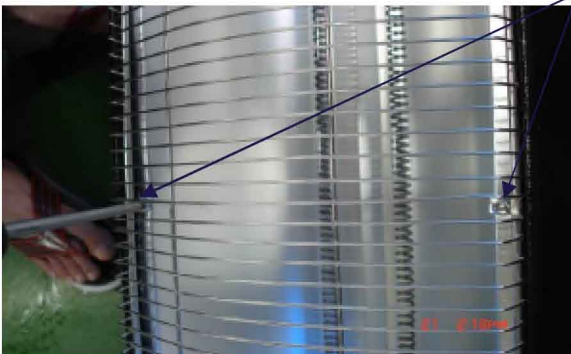

Unscrew the top and bottom Splash Guard

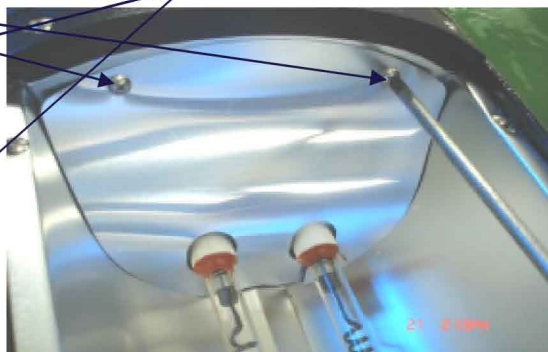


Move the Silicon Cups away from the Aluminium Cups

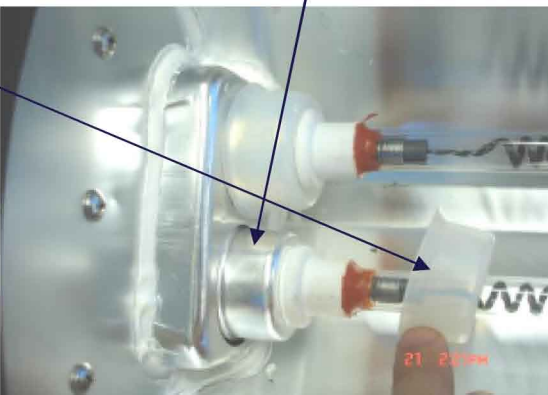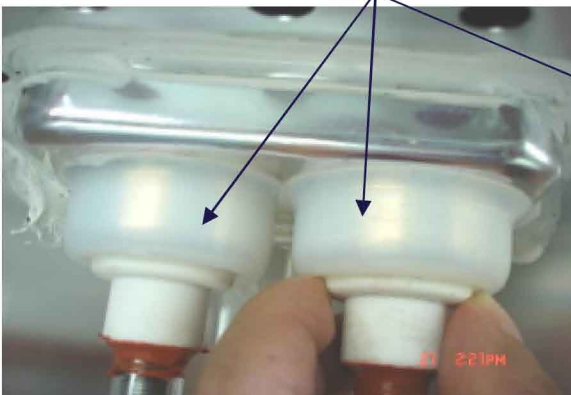


Take Faulty Heating Tube Out

Grip the tube and pull it downwards, insert a terminal screwdriver between the Tube terminal and the **Top Cover** lever the **Receptacle** and then move the Tube out

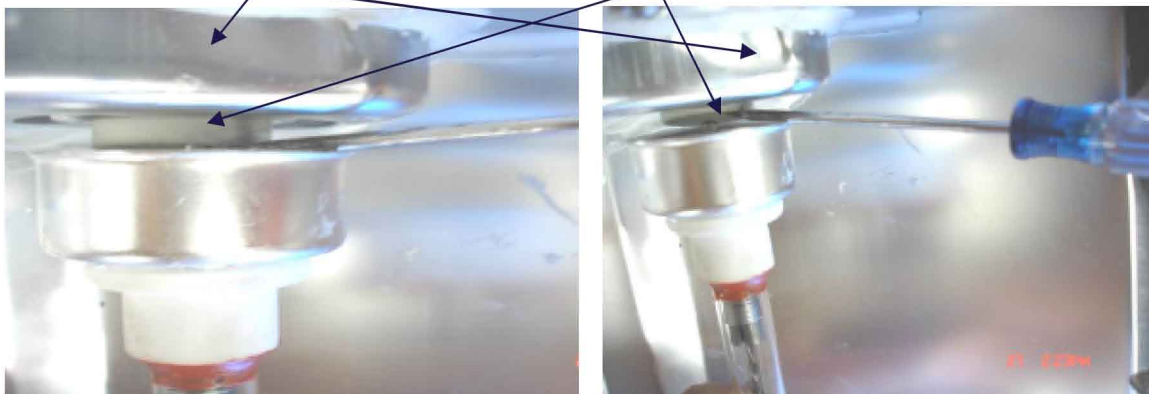


Installing The New Heating Tube

To make it easier, lock the **Bottom Receptacle** into the **Ring** then insert the Tube into the **Top Receptacle**, pull upwards to let the other terminal into the Bottom Receptacle

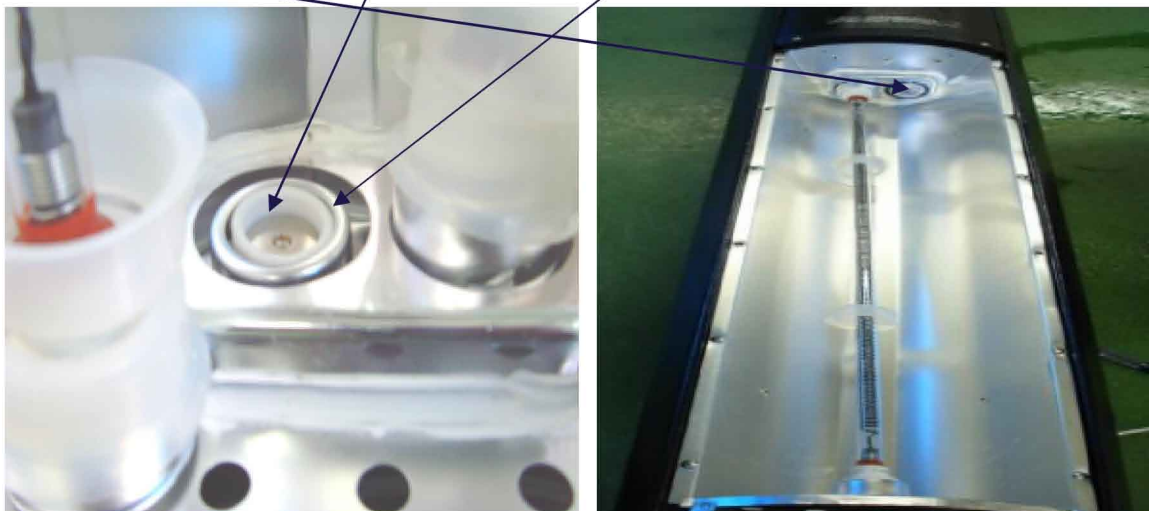

Make Sure The Tube Is In The Right Position

Turn the Tube, ensure both terminals touch their Receptacle perfectly; put the **Silicon Cups** back on the **Aluminium Cups** until it **touches the Cover for Receptacle**

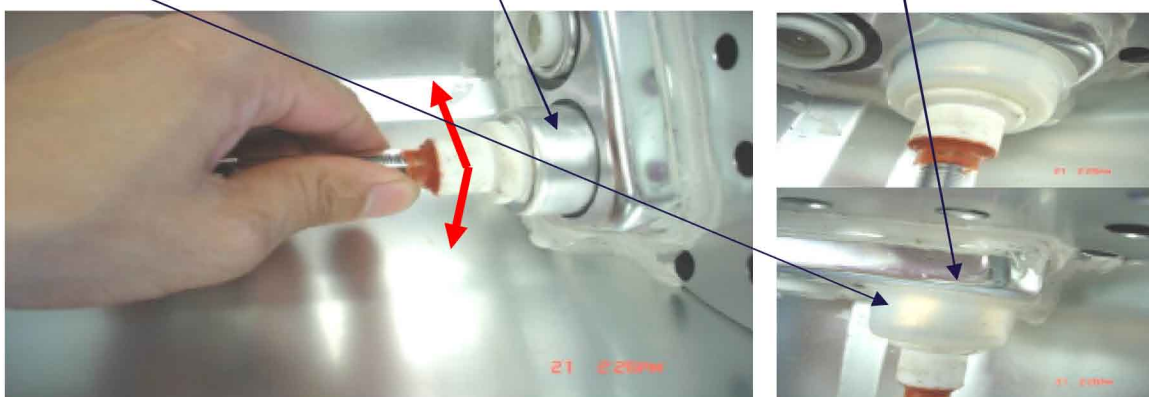

Finally, screw your Splash Guard,Grille and Strips back on to the unit. Replacement work is completed.